

U34/U34B SpaceSaver OPERATIONS GUIDE



OPEN

Stop. Look. Work Safely.

STEP 1

Remove Round Screen Cover and Sump (round) Screen. Inspect Sump Screen to ensure unit is free of blockage.



Clean as required and replace to proper position when finished.



Replace Round Screen Cover to proper position when finished.



STEP 2

Inspect Spray Arms to ensure they rotate freely. Inspect and remove any debris in the spray jets.





STEP 3

Push and hold the FILL button until the water level in the dishmachine reaches flat area of pan.



STEP 4

Press START button to cycle machine and dispense chemicals. Verify that the chemical is being dispensed by observing the air gap can located on the right side of the machine.

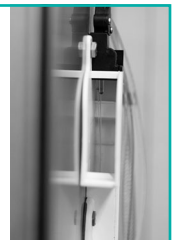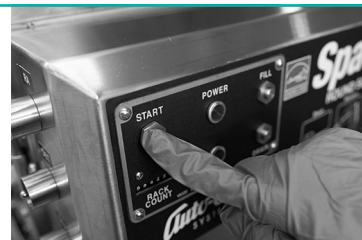

STEP 5

Check product supply containers and verify levels are adequate. Replace empty containers as necessary.



STEP 1

Fully insert the dishrack into dishmachine.
Close door securely.



STEP 2

Press START button to begin cycle.
NOTE: Green POWER light will be illuminated when power is on. Red RUN light will be illuminated during wash cycle.




STEP 3

After the completion of the cycle, fully open dishmachine door and remove rack.
Caution: To prevent possible burns, do not open door during cycle.



Verify Chemical delivery for all three chemicals regularly.* If chemical is not being properly delivered, check chemical supply container levels and tubing connections. Replace empty container or secure connections. Contact your service representative if chemical still does not dispense properly.

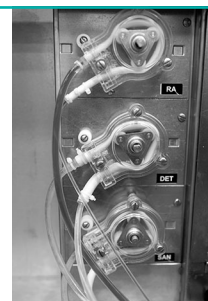

Verify Sanitizer levels regularly. Use test strip to ensure sanitizer level is at least 50 ppm and no more than 200 ppm. If the test strip does not indicate proper dosage, check sanitizer supply container levels and tubing connections. Replace empty container or secure connections. Repeat test.

NOTE: Test strips are most accurate at 120°F; higher temperatures may distort reading. If this occurs, use a clean glass to dip water from inside machine and let water cool to 120°F before testing. Contact your service representative if you still have trouble verifying sanitizer levels.

CLOSE

Stop. Look. Work Safely.

STEP 1

Press and hold DRAIN button to completely drain water from dishmachine.



STEP 2

Remove large debris from around the Round Screen Cover located above drain.
Caution: Use care as sharp objects may accumulate in this area.



STEP 3

Remove Round Screen Cover and Sump (round) Screen from drain cavity.



Clean as required and replace to proper position when finished.



Replace Round Screen Cover to proper position when finished.



STEP 4

Wipe interior and exterior of machine with clean cloth using mild detergent solution and warm water.

