

1. Desconecte el cable de potencia de microondas antes de limpiarlo.
2. Limpie todas las partículas de comida en el piso del horno y deséchelas.
3. Retire todas las piezas, lavar y desinfectar en el fregadero de tres compartimientos. Deje que se seque al aire.
4. Rocíe las superficies con limpiador de poca potencia o limpiador de uso múltiple y después limpiar con un paño limpio.
5. Para suelos más pesados, utilice solución desengrasante de alta resistencia y fregar con un estropajo de nylon.
6. Enjuague las superficies con agua limpia.
7. Desinfectar las paredes, pisos y otras superficies no desmontables del horno microondas con solución desinfectante para balde.

Auto-Chlor Products All Purpose Cleaner Sanitizer

HORNO MICROONDAS



La frecuencia de limpieza: Diario

19

19

MICROWAVE OVEN

Cleaning Frequency: Daily

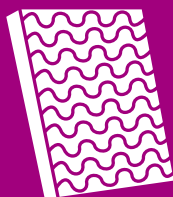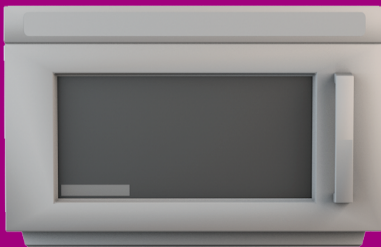

Auto-Chlor
SYSTEM

Auto-Chlor Products

All Purpose Cleaner Sanitizing Solution

1. Unplug microwave power cord before cleaning.
2. Wipe out all food particles on oven floor and discard.
3. Remove all parts, wash and sanitize in three compartment sink. Allow to air dry.
4. Spray surfaces with light duty all purpose or multipurpose cleaner and wipe with clean cloth.
5. For heavier soils, use heavy duty degreaser solution and scour with a nylon scrub pad.
6. Rinse surfaces with clean water.
7. Sanitize walls, floors and other non removable surfaces with sanitizer bucket solution..

REQUIRED CLEANING TOOLS SHOWN AT LEFT