

1. Retire y limpie los brazos de lavado limpio, las bandeja de desechos, las cortinas y el drenaje de columnas montantes
2. Abra las puertas y lave todos los depósitos con la manguera de agua.
3. Replazce a los brazos de lavado limpio colocar, bandejas de chatarra, cortinas y drenaje columnas montantes. Llene la máquina con agua caliente. Si es aplicable, encienda los calentadores de tanque.
4. Agregue la cantidad recomendada de removedor de cal en el tanque (una taza por galón).
5. Ejecute la máquina para 10 minutos.
6. Escorra y enjuague.

## Productos de Auto-Chlor Eliminador de depósitos calcáreos

## MAQUINA DE LAVA PLATOS INTERIORES



de cada servicio de comidas


La frecuencia de limpieza: Después

3

## DISHMACHINE

INTERIOR

Cleaning Frequency:  
Following each meal service

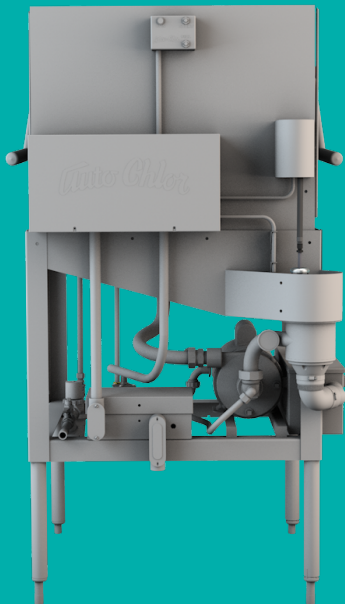

## Auto-Chlor Products

## Limescale Remover

1. Remove and clean wash arms, scrap trays, curtains and drain stand-pipes.
2. Open doors and flush all tanks with water hose.
3. Replace wash arms, scrap trays, curtains and drain stand-pipes. Fill machine with hot water. If applicable, turn on tank heaters
4. Add recommended amount of lime scale remover to tank (one cup per gallon).
5. Run machine for 10 minutes.
6. Drain and flush.
7. Consult your Auto-Chlor representative for machine operating instructions.

REQUIRED CLEANING TOOLS SHOWN AT LEFT